


40-7289L


Ford Mustang V8 289/302

With or Without Power Steering

(Use With Factory 3 Groove Crankshaft Pulley)

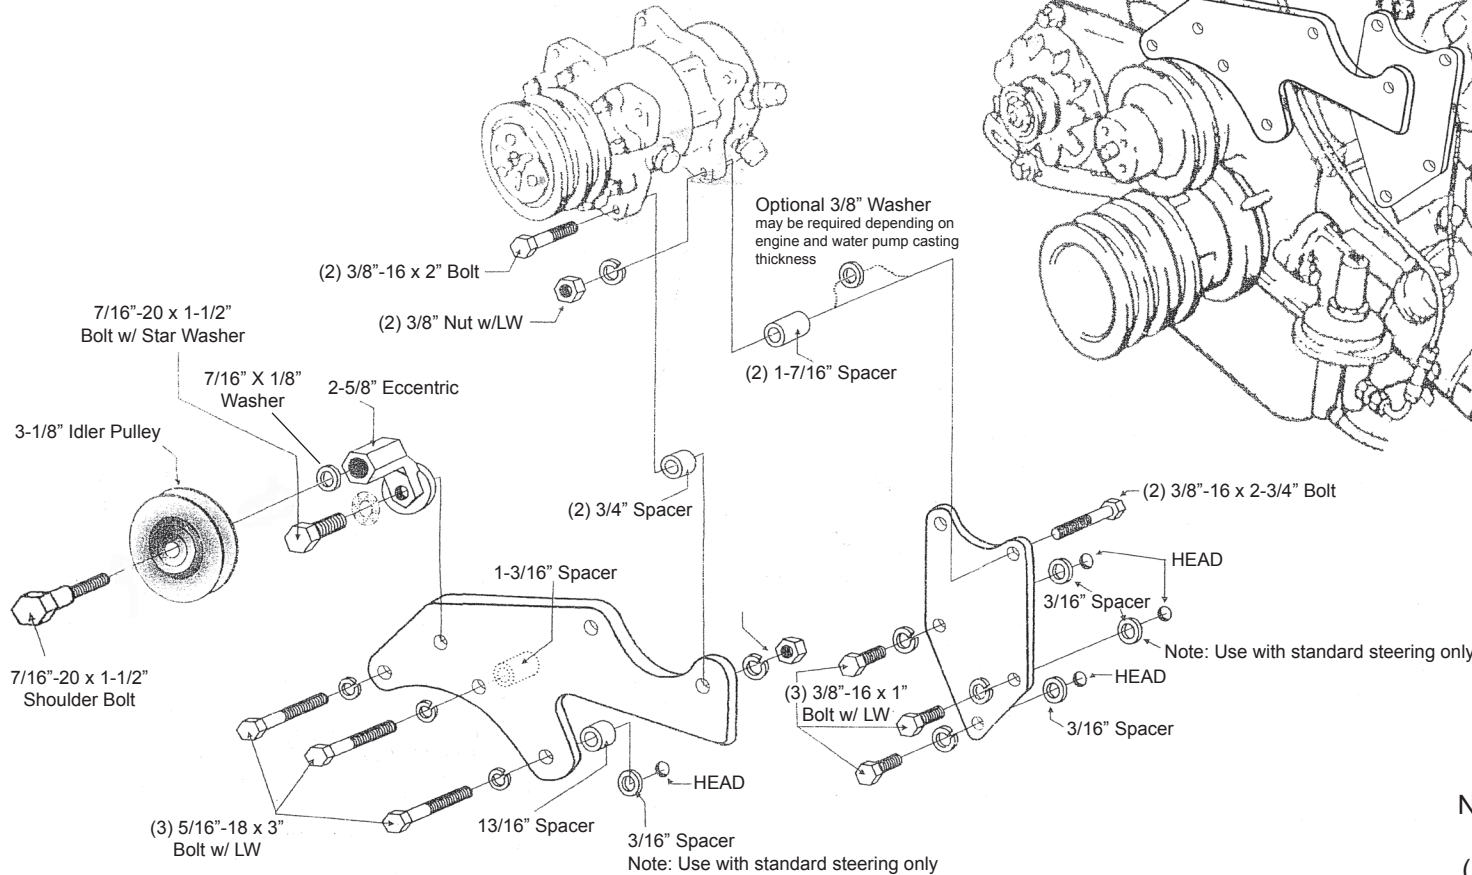

Belt Routing

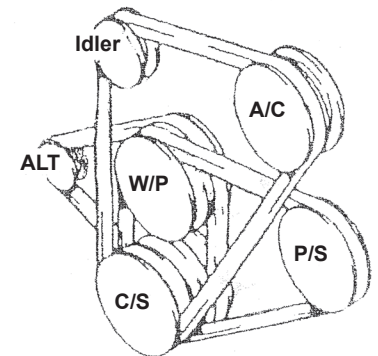

Note: Belt length on most applications will use a 13/32" X 49-5/8" Belt. (Gates #7490) Actual belt length may vary depending on pulley diameter

COLD AIR PRODUCTS

DIVISION OF COLD AIR PRODUCTS INC.

1201 Forum Way South - Fort Worth, TX 76140

(817) 531-2665 - FAX (817) 531-3257

As with any part of this nature make sure it fits your application before plating or painting. Parts that have been plated, painted or modified may not be returned.

INSTALLATION INSTRUCTIONS #40-7289L

1. Remove engine fan, pulley & belts.
2. Follow installation schematic and attach brackets using bolts and spacers provided. Note Check schematic for additional spacers required for vehicle with manual steering.
3. Attach compressor to brackets with hardware shown in schematic.
4. Secure/Tighten bracket and compressor mounting bolts.
5. Assemble idler pulley and eccentric assembly then attach to bracket using 7/16-20 x 2-1/2" bolt with star washer.
6. Replace engine fan and pulley.
7. Install belts as shown in schematic and adjust to proper tension.
8. Before starting engine, check for proper clearance for fan, hoses, belts and wire harness.

#40-7289L - Parts List

1) 40-0022 . Rear Mount

1) 40-0021 . Front Mount

1) 105-7121B Crankshaft Pulley

1) 49-0052 Bolt Kit

- | | |
|-------------------------|-------------------------------|
| 1) 40-0011..... | 3-1/8" Idler Pulley |
| 1) 40-0012..... | 2-5/8" Eccentric |
| 1) 64-437SW..... | Star Washer 7/16 |
| 3) 64-312-18-300..... | Bolt 5/16-18 X 3 |
| 3) 64-375-16-100..... | Bolt 3/8-16 X 1 |
| 2) 64-375-16-200..... | Bolt 3/8-16 X 2 |
| 2) 64-375-16-275..... | Bolt 3/8-16 X 2 3/4 |
| 1) 62-437-150SHDR..... | Shoulder Bolt 7/16-20 X 1-1/2 |
| 1) 64-437-20-150..... | Bolt 7/16-20 X 1-1/2 |
| 4) 64-375-16..... | Nut 3/8-16 |
| 3) 64-312-LW..... | Lock Washer 5/16 |
| 2) 64-375-FW..... | Flat Washer 3/8 |
| 7) 64-375-LW..... | Lock Washer 3/8 |
| 1) 62-750-437-812..... | Spacer 3/4 X 7/16 X 13/16 |
| 4) 62-750-437-187..... | Spacer 3/4 X 7/16 X 3/16 |
| 2) 62-750-437-750..... | Spacer 3/4 X 7/16 X 3/4 |
| 1) 62-750-437-1187..... | Spacer 3/4 X 7/16 X 1-3/16 |
| 2) 62-750-406-1437..... | Spacer 3/4 X 13/32 X 1-7/16 |
| 1) 62-750-437-125..... | Spacer 3/4 X 7/16 X 1/8 |

40-7289L

Compressor Mounting Bracket

Ford Mustang V-8 289/302

(Use with Factory 3 Groove Crankshaft Pulley)



1201 Forum Way South - Fort Worth, TX 76140
(817) 531-2665 - FAX (817) 531-3257