




INSTALLATION MANUAL


HOOD SCOOP

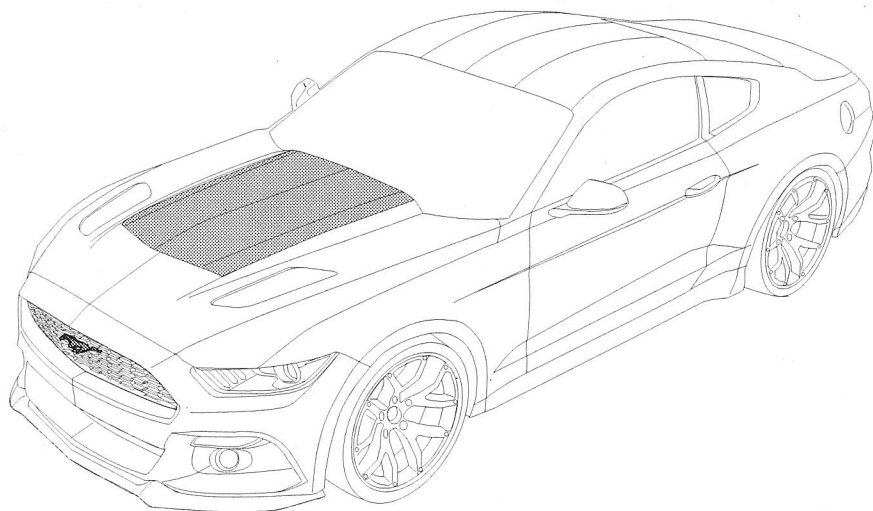

SCAN ME!
Watch the installation
video here



**READ CAREFULLY BEFORE
INSTALLATION**



TOOLS



CHECK LIST

*Already installed in the part

| ITEM | DESCRIPTION | DRAWING | AMOUNT |
|------|-----------------------|---------|-----------------------|
| A | * VHB TAPE | | Included in the parts |
| B | GREASE PENCIL | | 1 pc |
| C | POLYURETHANE ADHESIVE | | 1 pc |
| D | BLACKOUT | | 1 pc |
| E | ECO DOME | | 1 pc |



AIRDESIGN®

FORD - MUSTANG 2015 +

INSTALLATION MANUAL



**WASH WITH WATER, DETERGENT AND
SOFT CLOTH OR SPONGE**



**ENSURE VEHICLE SURFACE TEMPERATURE AND
PART ARE AT OR ABOVE 60 F / 16 C PRIOR TO
INSTALLATION**


1

PRE-MOUNT BLACKOUT

STEPS:


1. CLEAN SURFACE WITH ACETONE
2. APPLY WATER TO SCOOP AND STICKER
3. PLACE & PRESS

**THIS ELIMINATE GLARE CAUSED BY
REFLECTED LIGHT.**

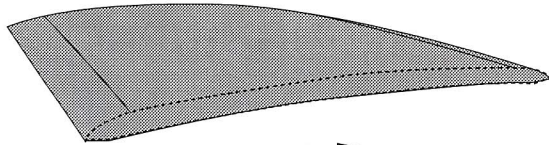

2

PLACE BLACKOUT

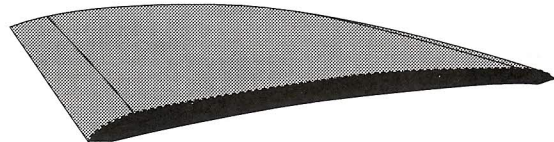


3

CLEAN



4


PRE-MOUNT

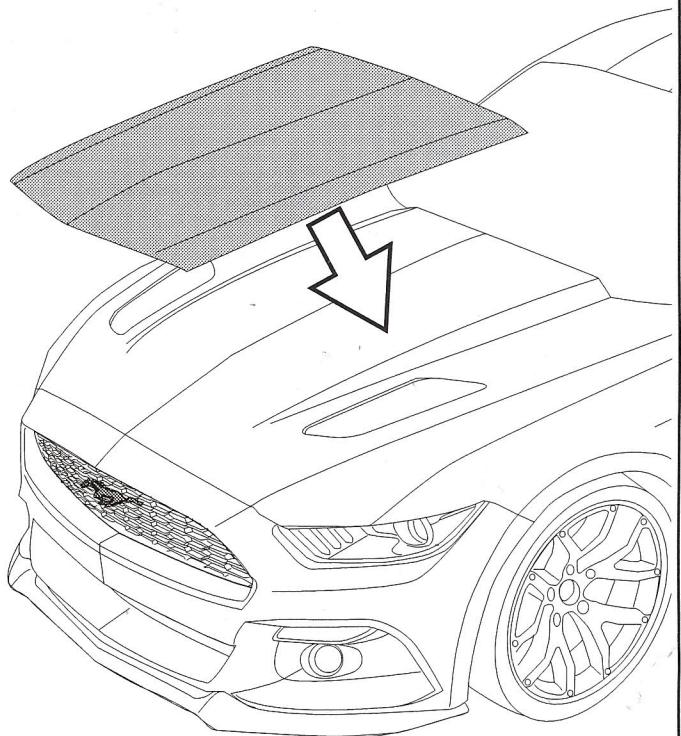




INSTALLATION MANUAL

5 ALIGN & CENTER

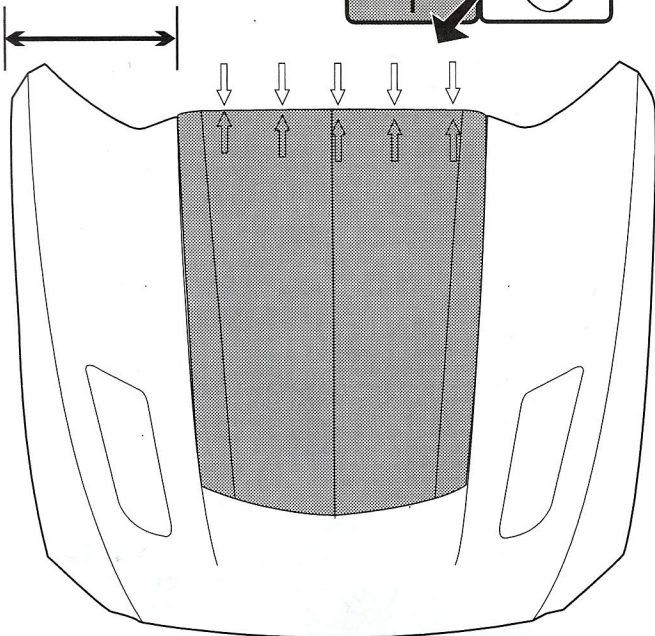




6 MARK

WITH THE GREASE PENCIL TIP IN CONTACT WITH THE BODY AND SCOOP, DRAW A DASHED LINE ON THE VEHICLE AROUND THE SCOOP.

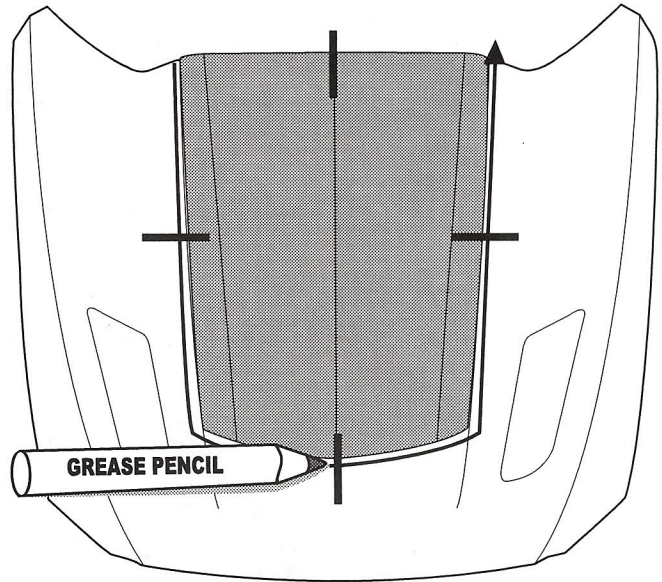

7 PEEL

ENSURE VEHICLE SURFACE TEMPERATURE AND PART ARE AT OR ABOVE 60 F / 16 C PRIOR TO INSTALLATION

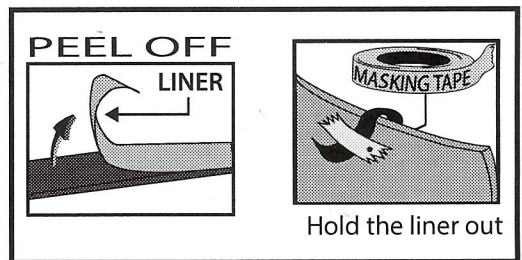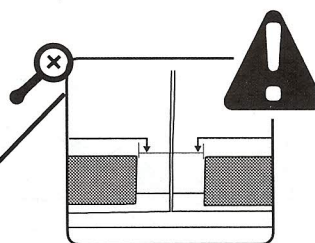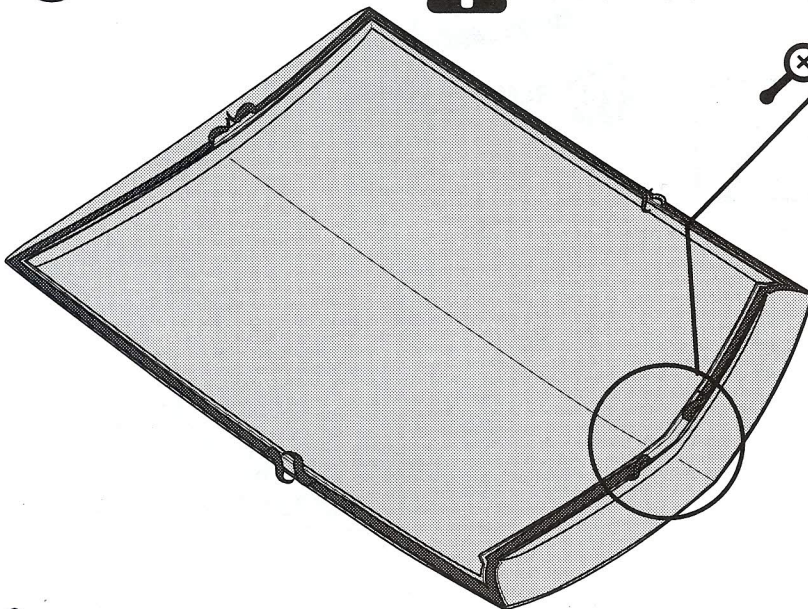

A full surface contact between tape and substrate is important for good adhesion performance. Contact is achieved by applying pressure. In practice a pressure between 40 and 50 N/cm² is usually needed and an application temperature at or above 16 °C or 60 °F is also necessary. During application, add-on parts and tapes must have the similar temperature.



AIRDESIGN®


FORD - MUSTANG 2015 +

INSTALLATION MANUAL

8 APPLY ADHESIVE




MAKE SURE VEHICLE SURFACE IS COMPLETELY DRY BEFORE INSTALLING

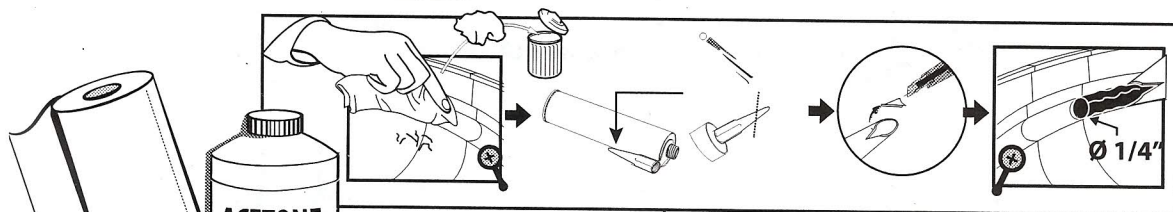

USE ACETONE TO CLEAN





Keep the indicated separation 1"

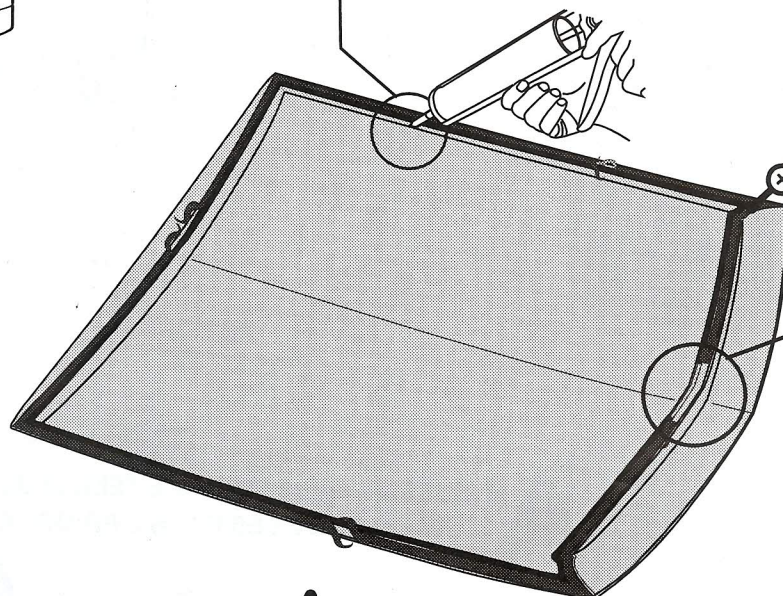


WATER DRAIN
KEEP OPEN WITHOUT ADHESIVE

9 PLACE

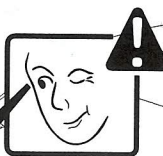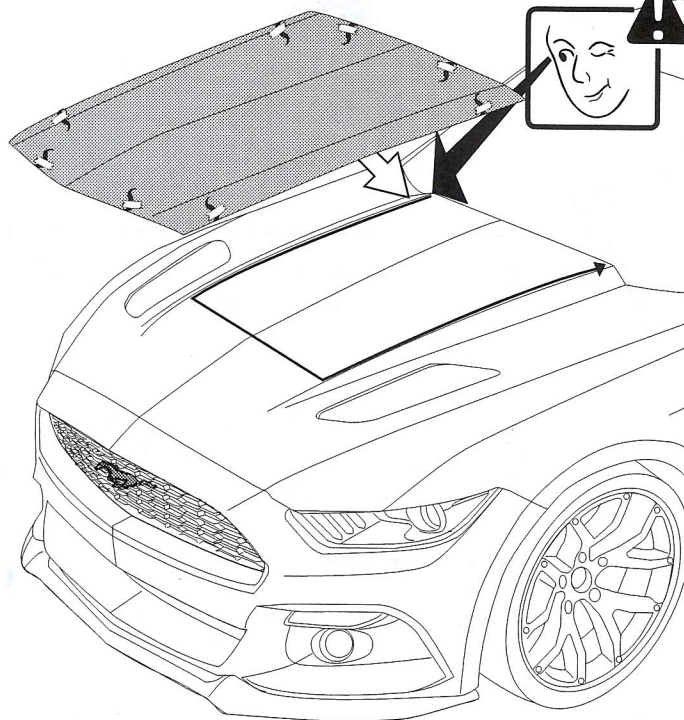

10 REMOVE LINER

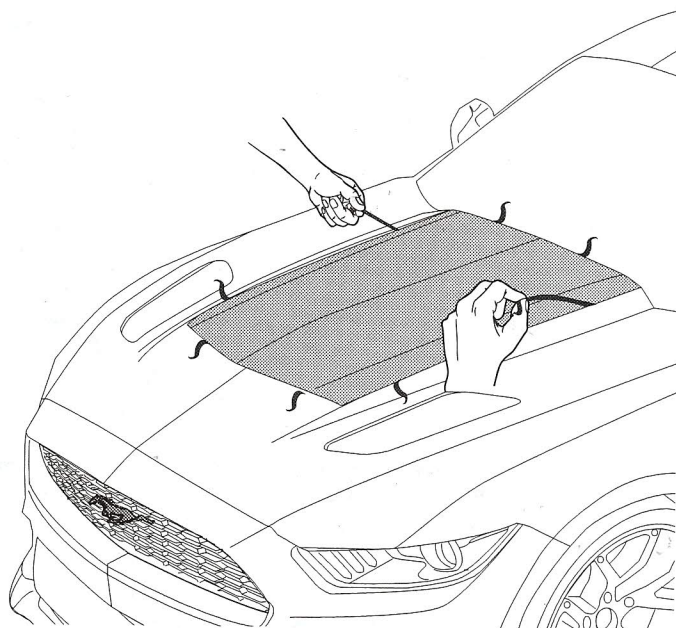



INSTALLATION MANUAL


11 PRESS

APPLY PRESSURE




40-50 N/cm²

12 CLEAN OFF GREASE PENCIL MARK

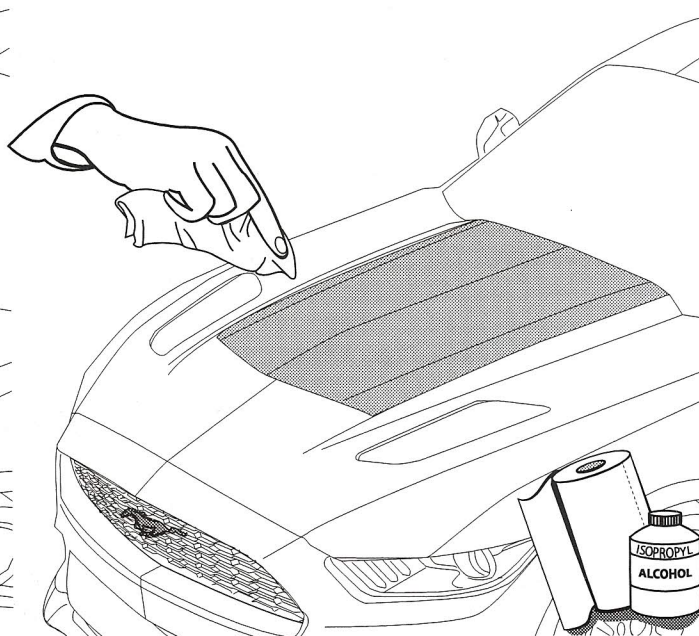

INSTALLED PARTS

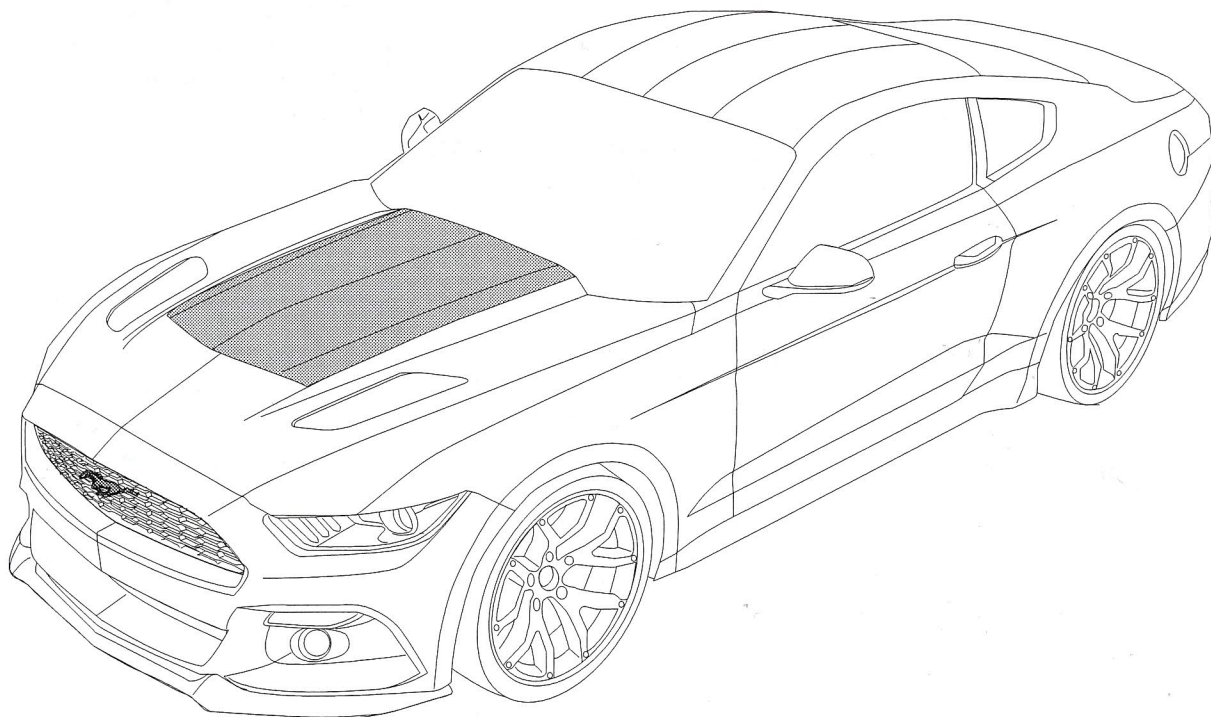




AIR DESIGN®

FORD - MUSTANG 2015 +

INSTALLATION MANUAL

Schedule 'B'

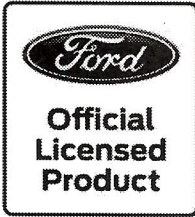

Mustang Hood Scoop, Quarter Window & Side Scoops

By Air Design USA LLC

LIMITED WARRANTY

All Ford part numbers provided by AIR DESIGN USA LLC are warranted to be from defects in materials or workmanship on products properly installed per the installation instructions provided with the product. This warranty covers repair or replacement of any defective product at no charge during the applicable warranty period listed below. Labor for replacement or service of defective product is not paid or reimbursed by AIR DESIGN USA LLC

| WARRANTY PERIOD | | |
|--|--|---|
| | USA | Outside USA |
| Product which appears on New Vehicle Monroney Label (window sticker) | Coverage which matches new vehicle warranty--- Ford - 3 years or 36,000 miles whichever comes first; Lincoln 4 years or 50,000 miles whichever comes first | Coverage which matches new vehicle warranty --- Ford - 3 years or 60,000 kilometers whichever comes first; Lincoln 4 years or 80,000 km whichever comes first |
| Part purchased and installed during or after the original vehicle warranty | Whichever of the following options which provides the greater benefit to the customer: 1) 2 years / unlimited miles or 2) The remainder of the new vehicle warranty | Whichever of the following options which provides the greater benefit to the customer: 1) 2 years / unlimited kilometers or 2) The remainder of the new vehicle warranty |

This limited warranty does not cover any damage, defect or malfunction caused by misuse, abuse, accident, improper installation, modification or improper or lack of maintenance. Incidental and consequential damages are not recoverable under this warranty. This warranty offers you specific legal rights. You may have additional or other rights as which vary from state to state or province to province.

If you experience a warranty issue with this product please visit your Ford dealer. If the repair is covered by the warranty above and completed by the dealership, labor is also covered by Ford -- Ford Warranty and Policy – Section 3.

Note to dealer:

Ford dealers should contact Air Design USA LLC by phone at: +1 (760) 435 0095 and ask to speak to the warranty administrator or by email to: monica@airdesignusa.com and billy@airdesignusa.com



READ CAREFULLY BEFORE PAINTING


BODY COLOR PAINTING INSTRUCTIONS

1



SAND/BUFF SMOOTHLY WITH A 400 GRIT SAND PAPER AND CLEAN WITH ISOPROPYL ALCOHOL

2



APPLY A GOOD QUALITY 2K PRIMER

3



CHECK THE PARTS PERFECTLY. THEY MUST HAVE A SMOOTH UNIFORM FINISH

4




CLEAN WITH DAMP MICROFIBER FLANNEL WITH A VARNISH CLOTH TO REMOVE DUST PARTICLES BEFORE APPLYING PAINT

5



APPLY THE BASE COAT SO AS TO OBTAIN A SMOOTH AND FINE FINISH

6




ALLOW A 15 MINUTES FLASH OFF. CHECK THE PART PERFECTLY AND DETAIL WHERE NECESSARY

7



APPLY A VERY LIGHT LAYER OF CLEAR COAT

8




ALLOW A 5 MINUTES FLASH OFF

9



APPLY A GENEROUS LAYER OF CLEAR COAT, SO AS TO OBTAIN THE DESIRED GLOSS AND SMOOTHNESS AND ALLOW A 5 MINUTES FLASH OFF

10



CURE TO MAXIMUM TEMPERATURE OF 60° C (140° F) FOR A PERIOD OF 15 MINUTES. NEVER EXCEED THIS TEMPERATURE



IMPORTANT



MAKE SURE THE PART IS WELL SUPPORTED AT ITS BOTTOM DURING ALL OF THE PAINTING AND CURING TO AVOID FALLS