



AMERICAN CAR CRAFT INSTRUCTIONS

Camaro "SS" Gas Cap Trim Brushed/Polished

Part #102009/102013 Patent Pending



PARTS INCLUDED:

- 1-Gas Cap Trim w/tape
- 1-Tube of Adhesive Promoter

Your new bezel is designed to fit on your factory gas cap.

1. Clean the painted area of your factory gas cap with household rubbing alcohol to remove any dirt and wax. Then swipe the area to be mounted once with the adhesive promoter tube provided.
2. **IMPORTANT:** Before permanent installation carefully place the new stainless bezel into position to check the shape of the cover. Make sure the overall shape of the new cover matches the shape of the curve of the car. It will be necessary to gently form the bezel by hand until you have achieved a nice perfect conformed fit to your cars curve without forcing. At this time you will need to make note of just how the cover sits in place making sure it sits nice and centered around your gas cap.
3. Peel the red release liner from the back of the stainless trim and carefully set it evenly around your factory gas cap and press firmly to set.

DO NOT GET WET FOR 24 HOURS.

Thank you and enjoy your purchase!
If any questions occur during installation please contact
AMERICAN CAR CRAFT
18924 SAKERA ROAD-HUDSON FLORIDA 34667
Phone # 727-861-1500 Fax # 727-861-1520
www.americancarcraft.com




AMERICAN CAR CRAFT INSTRUCTIONS

How to Use Your 3M Adhesive Promoter Tube

1. Hold the tube with your thumb and fore finger as shown.



2. Apply pressure with your thumb until you hear a “pop” sound.

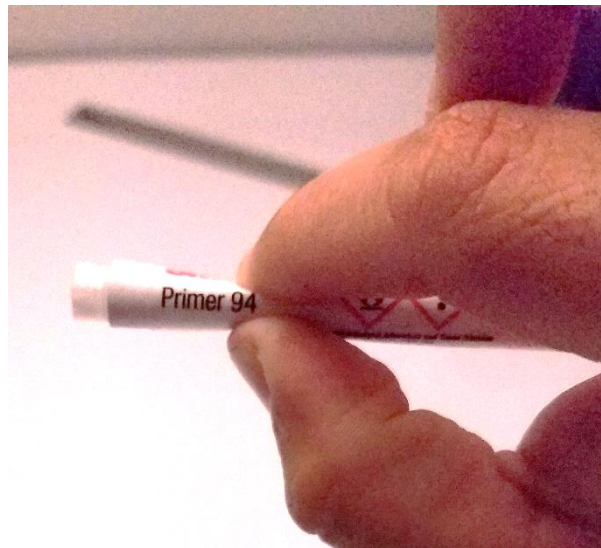

3. Shake the tube back and forth a couple times to get the promoter to flow through the felt tip.
4. Apply to product mounting surface as instructed in the product instructions.

If you need further instruction, below is a link to a video on our YouTube channel.

Type it into your browser exactly as it is below.

<https://youtu.be/vhXVOhBrfN8>