



Fuel Rail Light Kit 2pc LED

2014-2016



## AMERICAN CAR CRAFT INSTRUCTIONS

### 2016-2017 Chevrolet Camaro Illuminated Fuel Rail Kit Part #103083



#### **PARTS INCLUDED:**

- 2-Brushed/Polished led Rails
- 1-Fuse Holder with 5amp Fuse
- 2-Tubes of Adhesive Promoter

1. The first step will be to remove the black plastic cover from the car. This part is easily removed by simply pulling the top of the part away from the motor and it will unsnap.
2. The next thing that needs to be done in any peel and stick application is surface preparation. It is important that you examine the surface to determine if any kind of special treatments have ever been used. Such as wax/silicone treatments and/or polymer surface preps. Take a strip of masking tape and press it very firmly to make it adhere to the surface. Then peel it off to see how difficult it is to remove. If your masking tape is removed extremely easy and/or does not stick at all then you will need to perform a special surface preparation. In most cases like this, you will need to make a solution of a straight detergent (Johnson's Baby Shampoo or Palmolive Dish Soap) and water. Mix a 32oz bottle with about five tablespoons of soap detergent. Once you have the solution made wash the surface scrubbing quite vigorously to remove any surface contaminants.
3. When this is done you can proceed to the regular preparation. This is done by scrubbing the surface with alcohol and wiping it dry. At this point, you will need to test the surface again to see if you have achieved a tack. Apply a new strip of masking tape to the surface. If it adheres you have done a good job, if it doesn't then you must perform the wash again and again if necessary until you have achieved a nice tack. Once a tack has been achieved swipe the entire surface to be mounted with the adhesive promoter you will receive with any of our stainless steel kits. This promoter is not a cleaner but an adhesive accelerator, when used on

a nice clean and well-prepared surface this chemical, will create a very reliable bondable surface.

4. Now that all preparations have been made the next step will be to apply the accessory. It comes with a brushed trim ring with LEDs on both top and bottom. And tape behind the led's that will need to be pulled to stick the part to the black plastic fuel rail. Keep in mind that the adhesive is very aggressive and it will not allow you to reposition it once it has made contact with the surface. So go slow and sure. Once all hole and the perimeters are lined up, set the part in place pressing firmly along the entire surface to bond the part and then remove the protective liner. The bond will become permanent after twenty-four hours.
5. Once you have successfully installed the part you will need to install it back on the car and wire the part to a 12v source. This will require you to choose a good location for a switch. We recommend putting it in an easy location next to the fuse box. This will make it very easy to use the switch and tap the batteries positive and negative posts to supply your new cover with a reliable power source. **(The switch and wire for this are not included.**



**Thank you and enjoy your purchase!**

**If any questions occur during installation, please contact  
AMERICAN CAR CRAFT  
18924 SAKERA ROAD-HUDSON FLORIDA 34667  
Phone # 727-861-1500 Fax # 727-861-1520  
[www.americancarcraft.com](http://www.americancarcraft.com)**




## **AMERICAN CAR CRAFT INSTRUCTIONS**

### **How to Use Your 3M Adhesive Promoter Tube**

1. Hold the tube with your thumb and forefinger as shown.



2. Apply pressure with your thumb until you hear a “pop” sound.

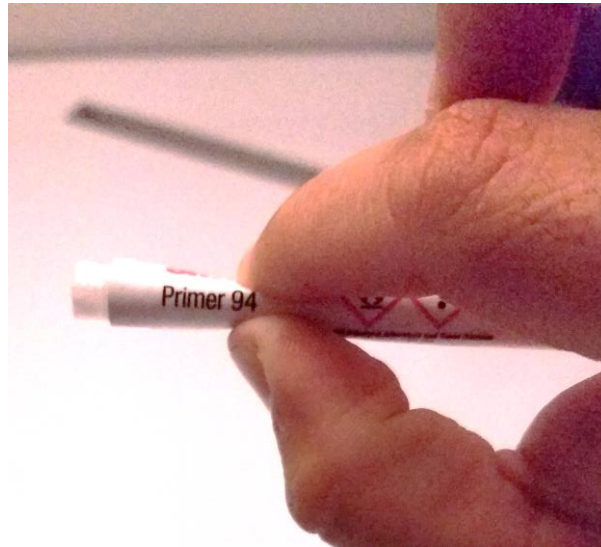

3. Shake the tube back and forth a couple times to get the promoter to flow through the felt tip.
4. Apply to product mounting surface as instructed in the product instructions.

**If you need further instruction, below is a link to a video on our YouTube channel.  
Type it into your browser exactly as it is below.**

**<https://youtu.be/vhXVOhBrfN8>**