



TRACK USE ONLY

STEP 1 : REMOVE SHORT SCREWS FROM DECKLID/SPOILER ASSY
SCREW REQUIRED T20 FOR INSTALLATION RECOMMENDED TORQUE 5.4Nm.

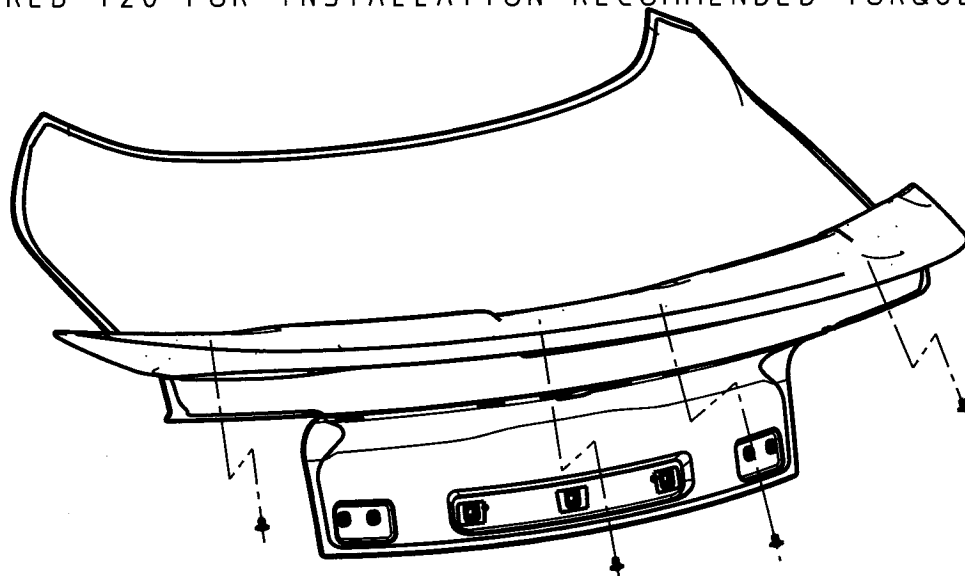


STEP 2 : ATTACH TO DECK LID/SPOILER ASSY USING THE
LONG SCREW FOR THE 4 WAY LOCATOR

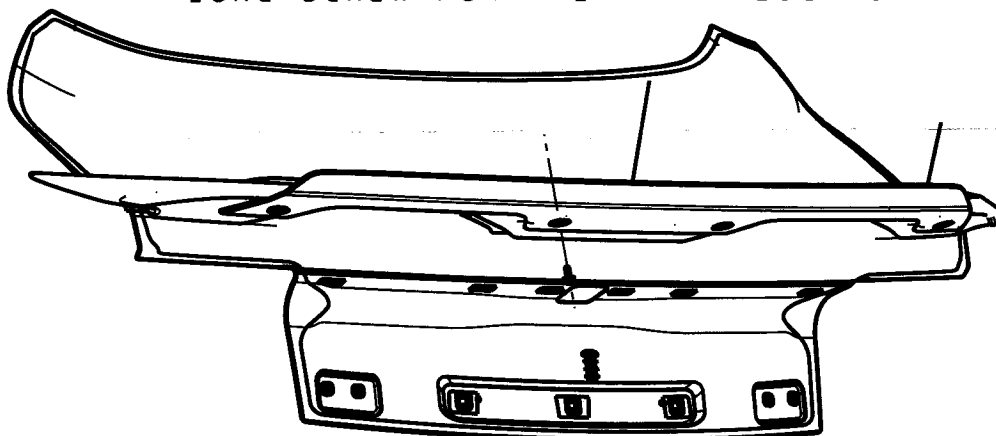

SCREW REQUIRED T20 FOR INSTALLATION RECOMMENDED TORQUE 5.4Nm.

STEP 3 : SECURE THE GURNEY FLAP USING THE
THREE (3) ADDITIONAL LONG SCREWS

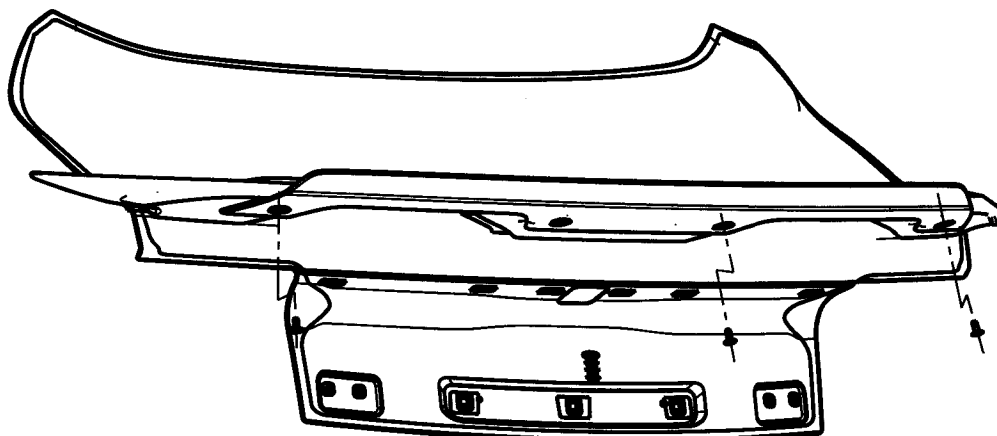

SCREW REQUIRED T20 FOR INSTALLATION RECOMMENDED TORQUE 5.4Nm