

45-0126C

Underdash Control Chrome Face with 4 Knobs




1201 Forum Way South, Fort Worth TX 76140
Phone: 817-531-2665 - FAX: 817-531-3257
www.oldairproducts.com - chill@oldairproducts.com

PREPARATION FOR INSTALLATION

- 1) Select area of dash to install control head.
- 2) Check for proper clearance behind dash and move (wires,cables,ect....) any objects that will interfere with installation of control head.


INSTALLATION OF ROTARY ELECTRONIC CONTROL ASSEMBLY.

- 1) Using control locate and mark mounting locations.
- 2) Drill 2) 3/16" holes at marked locations.
- 3) Carefully insert mounting studs on control through holes and attach control to dash with (2) 10-32 keps nuts.
- 4) Connect the blower switch to mating 5 terminal connector from wire harness.
- 5) Connect the two green wires to the terminals on the thermostat.
- 6) Connect the two 3 terminal connectors to the rotary heater valve and defrost controls by matching the red or green dots on the connectors.
- 7) Secure wire harness to prevent damage from movement while vehicle is in motion.

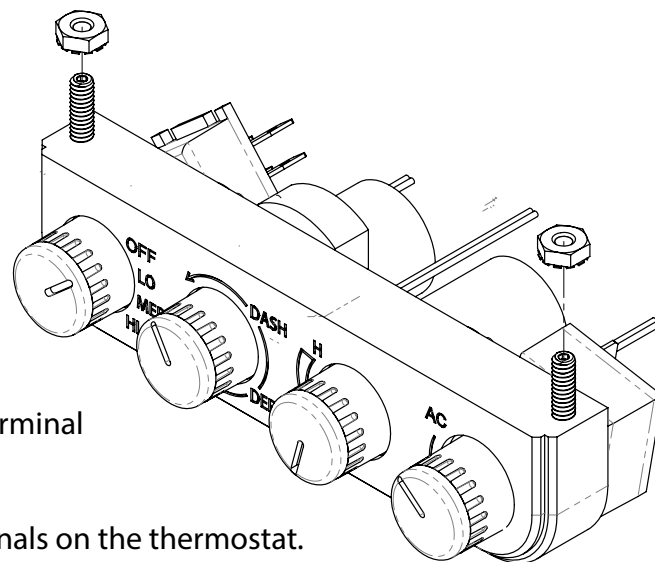

Installation of control assembly should now be complete. Refer to unit installation instructions provided in master kit to complete installation.

WIRING DIAGRAM

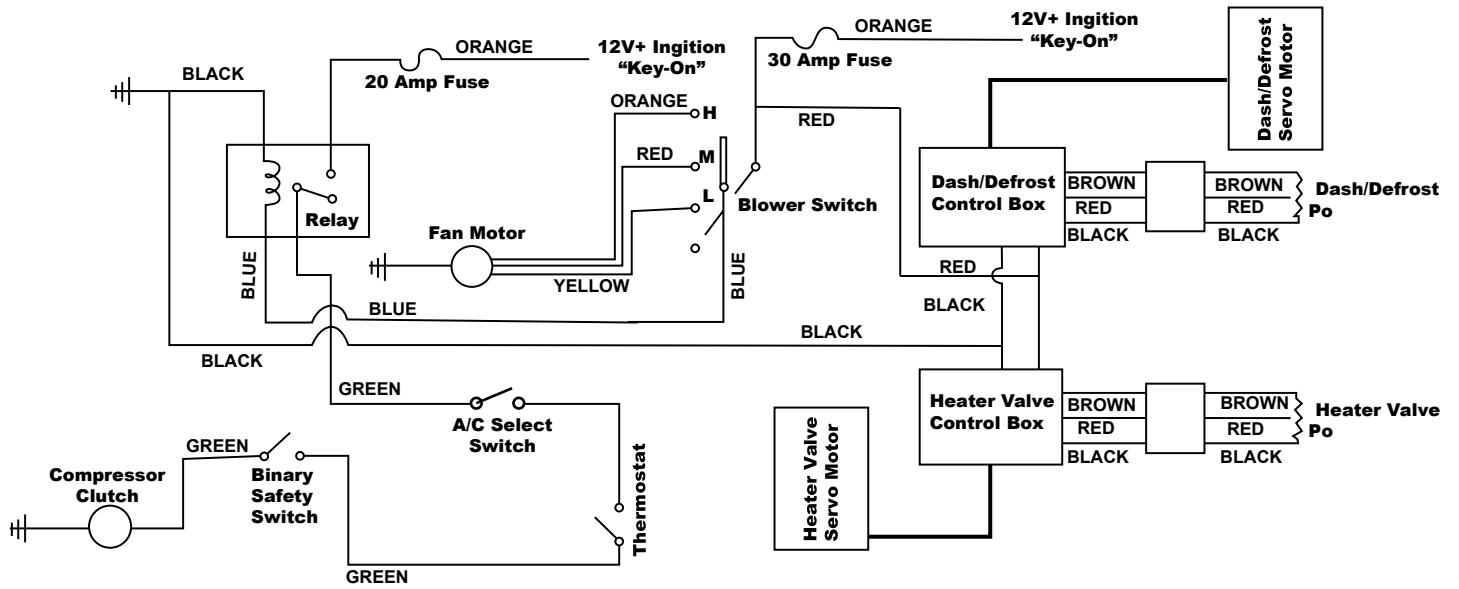

Control Panel Lights

Connect one wire from each of the bulbs to a ground (-).
The second wire from each bulb can be connected to the instrument panel lights to adjust brightness.

